Because we care.

MIDMARK®

Installation Instructions

9A282001 & 002 Welch Allyn Light Bracket Kit

KIT COMPONENTS

Part Number	Description	Qty.
9A28200X	Welch Allyn Bracket Kit (Model 404 & 405)	1
• 030-1280-10	Bracket, Light	1
• 040-0010-34	Screw, Light Mtg. 10-24 x 3/8"	2
• 040-0010-46	Screw, Brkt. Mtg.10-24 x 1/2"	4
• 041-0010-00	#10-24 Hex Nut.	4
• 045-0001-31	#10 Lock Washer	4
• 003-1104-00	Installation Instructions	1

REQUIRED TOOLS

Phillips Screwdriver
Power Hand Drill
Safety Glasses
7/32" Drill Bit
3/8" Socket or Wrench
Measuring Tape

IMPORTANT INSTRUCTIONS

Provides a means to mount a Welch Allyn Light (48700 or 48800) on Models 404, and 405 Exam Tables.

NOTE

Holes are pre drilled at factory on tables that have been ordered with the 9A282001 Light Bracket. Steps involving drilling are not required.

EQUIPMENT ALERT

Midmark supplies two #10-24 x 3/8" screws, for mounting Welch Allyn light to Midmark table bracket. *Do not discard them*.

NOTE

For light mounting procedures refer to information supplied with Welch Allyn light package.

INSTALLATION (1)

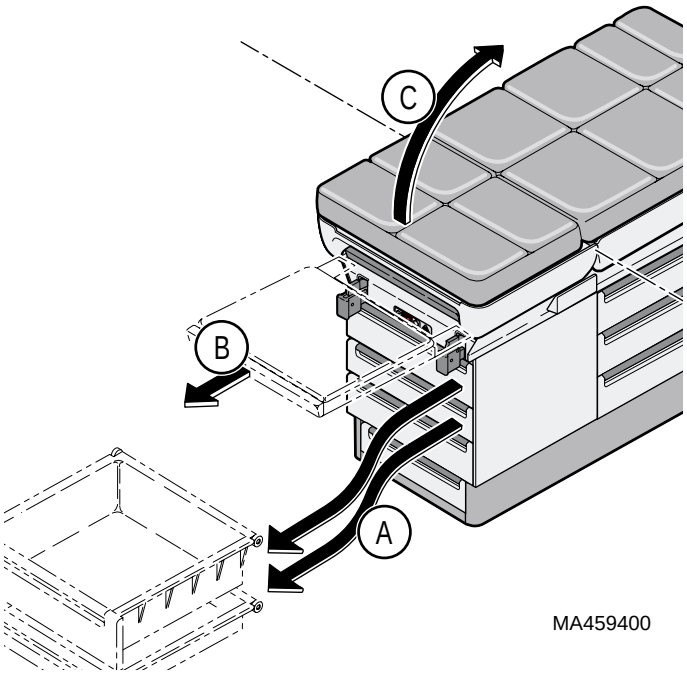

WARNING

Unplug table before performing any work. Failure to comply could result in personal injury.

A. Remove two top drawers on foot end of table.
B. Pull footrest out to full extension.
C. Raise and support seat section.

© Midmark Corporation - 2000

INSTALLATION (2)

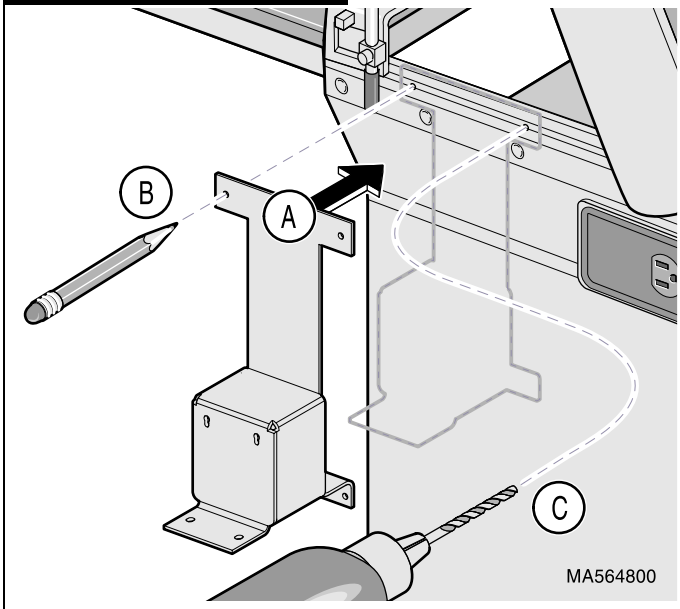

A. Place bracket on side of table with electrical outlet. “T” portion must span the two spot or plug welds and be even with top edge of upper wrap.

B. Mark position of two top bracket mounting holes.

C. Drill two 7/32" holes at location marks.

INSTALLATION (3)

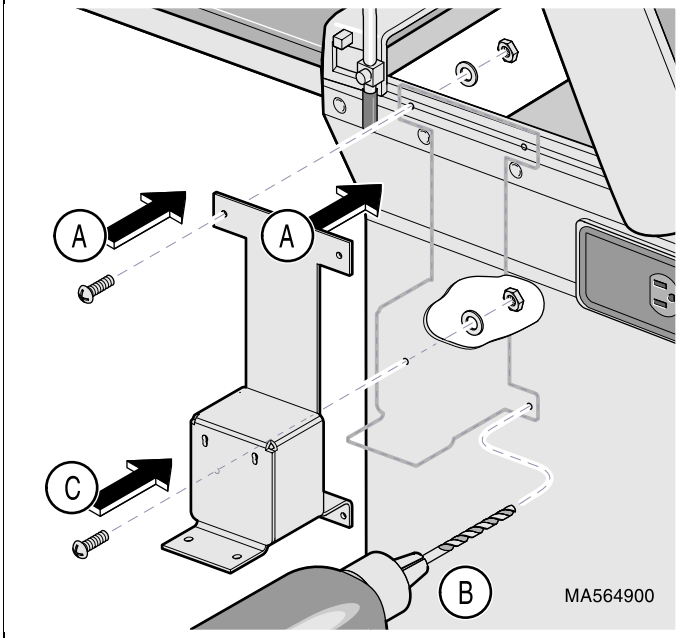

A. Position the bracket and secure with two #10-24 x 1/2" screws, lock washers and nuts.

EQUIPMENT ALERT

Check to assure no internal electrical wiring is in the way before drilling. If necessary re-route wiring away from area to be drilled.

B. Using bracket as template, drill lower two mounting holes.

C. Install two #10-24 x 1/2" screws, lock washers, and nuts.

INSTALLATION (4)

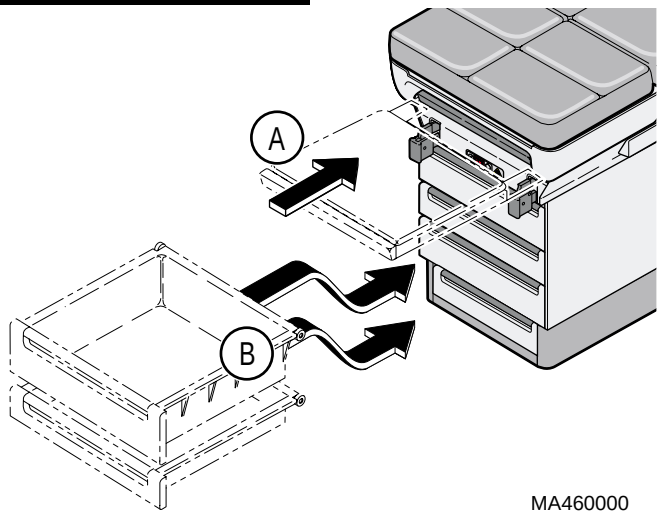

A. Push footrest in to stored position.

B. Install drawers and plug table into wall outlet.

NOTE

If Welch Allyn Light is not being mounted at this time, tape the two #10-24 x 3/8" screws to bracket to prevent loss.

MIDMARK®
Midmark Corporation, Versailles, Ohio 45380 U.S.A.
(937) 526-3662 FAX (937) 526-5542

© Midmark Corporation - 2000